


NISE 105 Quick Reference Guide

Ver B. (P/N: 60177B0277X00)

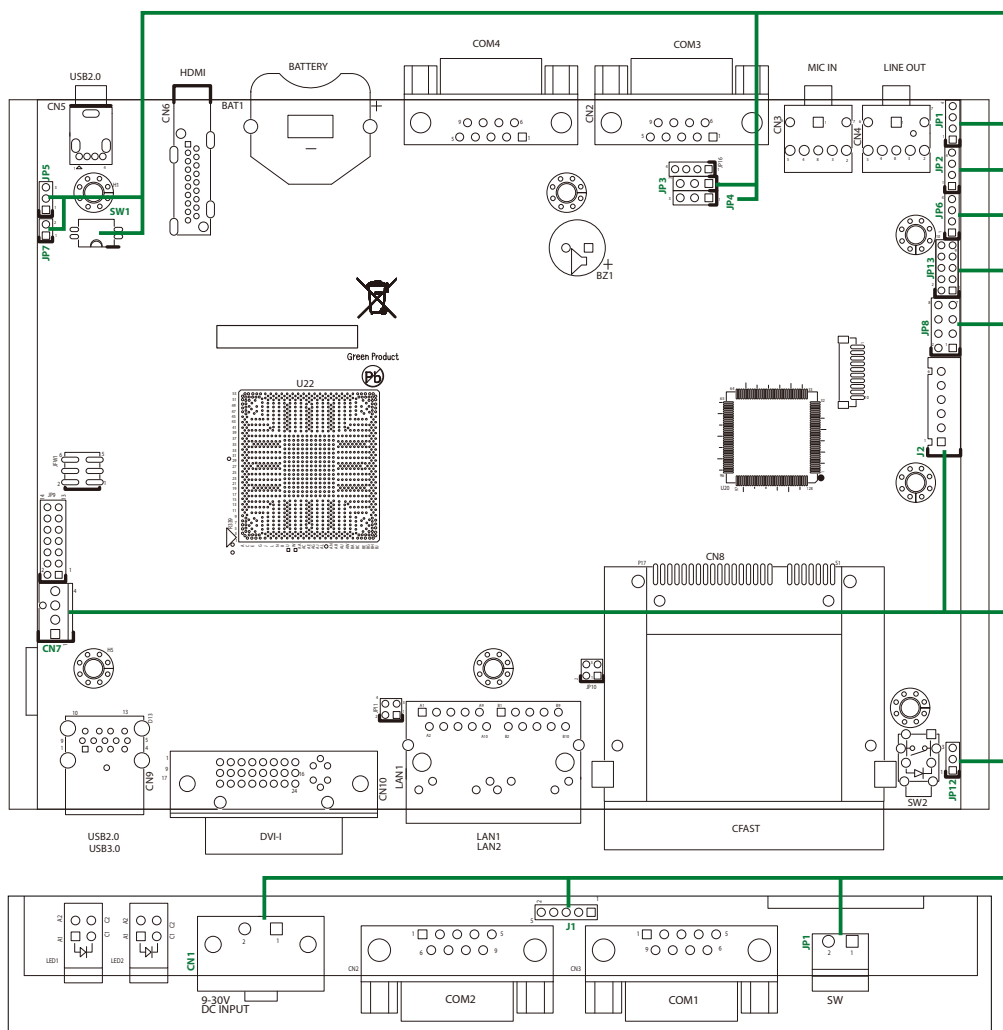

JP1: LINE_OUT PIN HEADER

Pin	Description	Pin	Description
01	OUT_L	03	AGND
02	NC	04	OUT_R

JP2: MIC_IN PIN HEADER

Pin	Description	Pin	Description
01	MIC1_L3	03	MIC_GND
02	NC	04	MIC1_R3

JP3: 3.5G LINE-OUT PIN HEADER

Pin	Description	Pin	Description
01	LOUT_RL	03	ANGND
02	LOUT_RR		

JP4: 3.5G MIC PIN HEADER

Pin	Description	Pin	Description
01	MIC_RL	03	ANGND
02	MIC_RR		

JP5: AT/ATX PIN HEADER

Pin	Description
1-2	AT
*2-3	ATX

JP6: LINE_IN PIN HEADER

Pin	Description	Pin	Description
01	FLIN_L	03	LIN_GND
02	LIN_JD	04	FLIN_R

JP7: Reset Pin header

Pin	Description
01	PM_RESET#_J
02	GND

SW1: RTC SWITCH (Default All Off)

Pin	Description	Pin	Description
01	SRTC_TEST#	03	GND
02	RTC_TEST#	04	GND

JP8: PS2 KB/MS PIN HEADER

Pin	Description	Pin	Description	Pin	Description	Pin	Description
01	VCC5	03	KDAT_R	05	KCLK_R	07	GND
02	VCC5	04	MDAT_R	06	MCLK_R	08	GND

JP13: GPIO PIN HEADER

Pin	Description	Pin	Description	Pin	Description	Pin	Description	Pin	Description
01	VCC5	03	ICH_GPO0_OUT	05	ICH_GPO1_OUT	07	ICH_GPO2_OUT	09	ICH_GPO3_OUT
02	GND	04	ICH_GPIO_IN	06	ICH_GP1_IN	08	ICH_GPI2_IN	10	ICH_GPI3_IN

J2: POWER PIN HEADER

Pin	Description	Pin	Description	Pin	Description
01	12VSB	03	12VSB	05	GND
02	12VSB	04	GND	06	POWER_STATUS

CN1: POWER CONNECTOR

Pin	Description
01	GND_FLT
02	VIN

CN7: FAN CONNECTOR

Pin	Description	Pin	Description
01	GND	03	CPUFANIN
02	VCC12	04	CPUFANOUT

J1: COM 2 RI PIN HEADER

Pin	Description	Pin	Description
1-2	VCC5	*4-5	RING
2-3	VCC12		

JP1: POWER HEADER

Pin	Description
01	PBT_PU
02	GND

JP12: ATX or RESET ON/OFF

Pin	Description
*1-2	Push Button Type
2-3	RESET Button Type

Replaceable Batteries

CAUTION: Risk of Explosion if Battery is replaced by an Incorrect Type. Dispose of Used Batteries According to the Instructions.

Quick reference guide is subject to change without prior notice.

For any update, please visit our website: www.nexcom.com

□ =Pin1 [*]=Default setting